

IP CONTROL BUDDY

EB-44, EB-42, EB-41

User Manual

Table of Contents

1.	OVERVIEW	1
2.	EQUIPMENT LIST	3
3.	INSTALLATION	4
4.	SYSTEM CONFIGURATION PAGE	6
5.	VIEW RECEIVED DATA	9
6.	GPI EVENTS PAGE	10
7.	GPO ACTIONS PAGE	12
8.	REMOTE DEVICE ASSIGNMENT PAGE	15
9.	KEY MAPPER PAGE	18
10.	GTP-32 DC20 RECEIVE EVENTS	20
11.	SERIAL PORT CONFIGURATION PAGE	22
12.	AHSC TX ACTIONS PAGE	24
13.	AHSC RX ACTIONS PAGE	26
14.	HTTP GET POST ACTIONS PAGE	28
15.	SNMP TXRX ACTIONS PAGE	30
16.	MEM CONFIGURATION PAGE	32
17.	EVENT ACTION TABLE	34
18.	TALLY ASSIGNMENT TABLE	40
19.	EXAMPLES AHSC PATTERNS	45
20.	EXAMPLES SEQUENCES	48
21.	EXAMPLES MEM FLIP FLOP	50
22.	EXAMPLES MEM RADIO GROUP	51
23.	EXAMPLES GPO MOMENTARY RADIO GROUP	52
24.	PANEL LAYOUT	54
25.	SPECIFICATIONS	55
26.	WARRANTY	56

1. OVERVIEW

When you need to push a button, but it doesn't have any!

***Tactile – Fast – Easy – Dependable* CONTROL**

The **IP Control Buddy (EB44, EB42 or EB41)** makes it easy to add tactile push buttons where and when you need them:

- ✓ 1, 2, or 4 Push Buttons
- ✓ Mounts in a 1-RU panel, desktop, or control surface
- ✓ RS232/RS422 serial port
- ✓ Fast Ethernet (100 BASE-T Full Duplex)
- ✓ Supports Power Over Ethernet (POE)

Use the IP Control Buddy when you need to:

- Control a GPI Output and status a GPI Input
- Transmit Ethernet TCP / UDP/ SNMP / HTTP messages and status responses.
- Receive Serial or Ethernet data to turn on/off a GPI Output.
- Transmit Serial messages and status responses. Receive specific Serial data and then transmit an Ethernet or SNMP notification
- Trigger a simple or complex sequence of actions from a Keypress or Source event: GPI Outputs, Serial & Ethernet messages
- Periodically send a heartbeat message: "I'm alive!"
- Use a Watchdog timer to transmit an SNMP notification after a time period of no heartbeats.
- Monitor SNMP Traps and turn on GPI Outputs (GPO)
- Control Flex Control Network devices, Tally them and more...

The IP Control Buddy (EB44, EB42 or EB41) is a panel of generic switches designed to emulate the operation of mechanical switches. The mechanical switch feel is provided by the IP Buddy's front panel switch. The mechanical switch's contact closure is provided by the IP Buddy's general purpose outputs (GPO). The mechanical switch's internal tally indicator is provided by the IP Buddy's switch's backlight.

Unlike mechanical switches, the operating mode of the front panel switches, GPO contact closures, and tally can be easily configured by the user for their specific application. Additionally, a switch on the IP Control Buddy can be configured to control Actions on another USP, GTP, IP Buddy or AIB as well as tally sources off of remote USP, GTP, IP Buddy or AIB.

Getting Started.....

1. Go to Installation Section to install the IP Control Buddy.
2. Go to System Configuration Section to set static IP address, Subnet Mask, and Gateway address.
3. Go to Remote Device Assignment Section to enter IP addresses for remote devices that USP3 will communicate with.
4. Go to System Configuration section to set default settings.


2. EQUIPMENT LIST

<u>Qty</u>	<u>Component</u>	<u>DNF Part Number</u>
1	IP Control Buddy	EB-44, EB-42 or EB-41
1	Power Supply & Power Cord	PS-IPCB

3. INSTALLATION

Mount product into rackmount panel, desktop, or other using the mechanical drawing below.

EB4X
Cutout and location of
mounting holes.

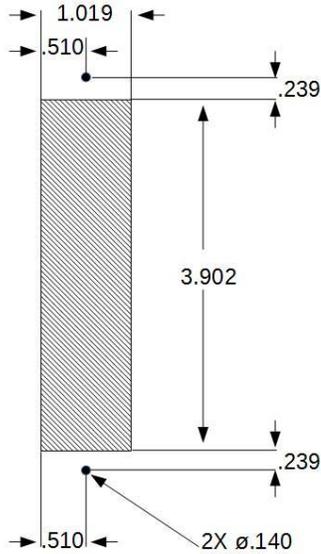

Rev 040516

Note- All dimensions are in inches.

If required, wire GPI Inputs, GPI Outputs (GPO), and serial cables to screw terminal blocks on rear of product. See SPECIFICATIONS section for wiring details.



Connect Power Over Ethernet (POE) by inserting Ethernet cable into RJ45 connector on rear. Or, connect external power supply to 2-pin white power connector adjacent to RJ45 connector.

1. Connect Power Over Ethernet (POE) by inserting Ethernet cable into RJ45 connector on rear.
OR,
Connect external power supply to 2-pin white power connector adjacent to RJ45 connector.
2. Connect Ethernet cable to ETHERNET connector.

DEFAULT ETHERNET CONFIGURATION

IP Address: **192.168.10.217**
Subnet Mask: **255.255.255.0**
Gateway: **192.168.10.1**

The IP Control Buddy is configured using a standard web browser (Safari, Firefox, and Chrome). Enter the IP Control Buddy's IP address in the Address/ URL bar, typically located at the top of the web browser page, to access the Home Page. Use the links on the left side of the Home Page to access the desired configuration web pages.

All configuration settings are saved in non-volatile memory in the IP Control Buddy. Settings are retained when power is removed.

Settings may be uploaded to a computer as a configuration file (.dnf) for storage. Configuration files may be downloaded from a computer into the IP Control Buddy to restore a saved configuration. A configuration file contains all of the IP Control Buddy's configurations except IP address, subnet mask, and gateway address. The IP Control Buddy does not support partial configuration upload or download. The configuration file is not a text formatted file. It cannot be viewed or modified with a text editor.

To access the System Configuration web page, use the following log-on when prompted:

Username: dnfuser
Password: controls

4. SYSTEM CONFIGURATION WEB PAGE

Use this page to change the Password, IP Address, Subnet Mask, Gateway Address, DNS and DHCP settings for the IP Control Buddy. Additionally this page is used to install firmware upgrades, SAVE/RESTORE configuration files, set factory defaults and configure the power up options for the IP Control Buddy panel:


The default IP address is: 192.168.10.217

The default Gateway is: 192.168.10.1

The default Mask is: 255.255.255.0

SET ADMIN PASSWORD

The default password for the IP Control Buddy is "controls". To set a unique password follow the instruction provided on the system configuration page. A password can contain up to 19 characters. Once a new password has been saved the new password will take effect on the next login.

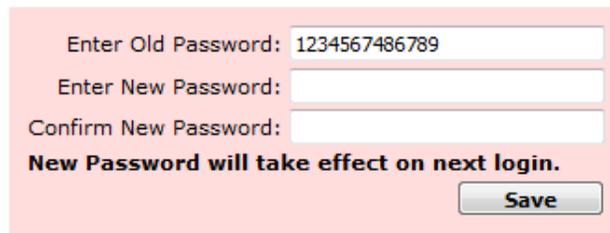

The screenshot shows a form for setting an admin password. It contains three input fields: 'Enter Old Password:' with the value '1234567486789', 'Enter New Password:', and 'Confirm New Password:'. Below the fields is a message: 'New Password will take effect on next login.' and a 'Save' button.

SET SYSTEM LABEL

The system label is a unique name assigned to a IP Control Buddy which allows operators to easily distinguish between multiple units. The system label is displayed at the top right of every webpage on the USP3. Each unit should be assigned a system label to allow easy identification.



- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

System Configuration

- P1 Software Upgrade
- Web Upgrade
- Save Configuration to PC
- Restore Configuration from PC
- Set Factory Defaults

Enter Old Password:

Enter New Password:

Confirm New Password:

New Password will take effect on next login.

Redundant Mode Disabled On Powerup

Keys Enabled On Powerup

Enter Label:

Log Received Data from:

[View Received Data](#)

Enter the new IP settings below:

DHCP:	<input type="text" value="Disabled"/>
IP Address:	<input type="text" value="192.168.10.231"/>
Gateway:	<input type="text" value="192.168.10.1"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Primary DNS:	<input type="text" value="0.0.0.0"/>
Secondary DNS:	<input type="text" value="0.0.0.0"/>

P1 Software Upgrade:	Use this link to install the P1 upgrade file provided by DNF Controls
Web Upgrade:	Use this link to install the Web pages upgrade file provided by DNF Controls
Save Configuration to PC:	Use this link to save the IP Buddy's current configuration to a configuration file on a computer. The web browser will prompt for file name and directory. The file extension must be 'dnf'.
Restore Configuration from PC:	Use this link to download a configuration file from your computer to the IP Buddy. The web browser will prompt for directory and configuration file name. The file extension must be 'dnf'.
Set Factory Defaults:	Use this link to reset all IP Buddy configuration settings to factory defaults. This will NOT change the IP address, subnet mask or gateway address. The IP Buddy will automatically reboot.
Redundant Mode on Powerup:	Use this dropdown to set the Redundant Mode on Powerup. If set to "Enabled" the IP Buddy will boot up with redundant mode enabled upon powerup. If set to "Disabled" the IP Buddy will boot up with redundant mode
Key Mode on Powerup:	Use this dropdown to set the Key Mode on Powerup. If set to "Enabled" the IP Buddy will boot up with its keys enabled upon powerup. If set to "Disabled" the IP Buddy will boot up with its keys disabled upon powerup.
Enter Label:	Enter label to be displayed on top right of all web pages
Log received data from:	Use this dropdown to set the remote device that the IP Buddy will log received data from. After the remote device has been selected, select the "View Received Data" to enter the log page (See below).
Enter the new IP settings below:	DHCP ENABLED/DISABLED: Use this dropdown to enable or disable DHCP. Enter the new IP address, Gateway, Subnet Mask Primary DNS and Secondary DNS. Click on <u>Save Config</u> to save the new entries. The IP Buddy will automatically reboot.

5. VIEW RECEIVED DATA

The IP Control Buddy's View Received Data link under the System Maintenance page monitors all incoming data from the selected remote device. Use the Refresh link to view incoming data as it is received. Use the Clear Log link to clear the log data.

!!NOTE!! View Received Data page does not auto-refresh and does not generate a log file.

VIEW RECEIVED DATA

Remote Device IP: 192.168.10.235

Remote Device Source Port: 161

Remote Device Destination Port: 161

[Refresh](#)

Remote Device: 1

Current Address: 0xA00100DC

Address:	00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F	
A00FF30	00 00 00 00 30 30 02 01 00 04 06 70 75 62 6C 69 0 0 publi
A00FF40	63 A2 23 02 04 00 00 00 01 02 01 00 02 01 00 30	c . # 0
A00FF50	15 30 13 06 0B 2B 06 01 04 01 81 A8 25 08 01 00	. 0 . . . + % . . .
A00FF60	04 04 45 63 68 6F 30 36 02 01 00 04 06 70 75 62	. . Echo 0 6 publi
A00FF70	6C 69 63 A3 29 02 01 FF 02 01 00 02 01 00 30 1E	lic .) 0 .
A00FF80	30 1C 06 0B 2B 06 01 04 01 81 A8 25 07 01 00 04	0 . . . + %
A00FF90	0D 55 52 5F 55 73 65 72 52 65 67 31 3A 32 30 30	. UR _ UserReg 1 : 2 0 0
A00FFA0	02 01 00 04 06 70 75 62 6C 69 63 A2 23 02 04 00 public . #
A00FFB0	00 00 02 02 01 00 02 01 00 30 15 30 13 06 0B 2B 0 . 0 . . . +
A00FFC0	06 01 04 01 81 A8 25 08 01 00 04 04 45 63 68 6F % Echo
A00FFD0	30 36 02 01 00 04 06 70 75 62 6C 69 63 A3 29 02	0 6 public .) .
A00FFE0	01 FF 02 01 00 02 01 00 30 1E 30 1C 06 0B 2B 06 0 . 0 . . . +
A00FFF0	01 04 01 81 A8 25 07 01 00 04 0D 55 52 5F 55 73 % UR _ Us
A010000	65 72 52 65 67 31 3A 32 30 30 02 01 00 04 06 70	erReg 1 : 2 0 0 p
A010010	75 62 6C 69 63 A2 23 02 04 00 00 00 03 02 01 00	ublic . #
A010020	02 01 00 30 15 30 13 06 0B 2B 06 01 04 01 81 A8	. . . 0 . 0 . . . +
A010030	25 08 01 00 04 04 45 63 68 6F 30 36 02 01 00 04	% Echo 0 6
A010040	06 70 75 62 6C 69 63 A3 29 02 01 FF 02 01 00 02	. public .)
A010050	01 00 30 1E 30 1C 06 0B 2B 06 01 04 01 81 A8 25	. . 0 . 0 . . . + %
A010060	07 01 00 04 0D 55 52 5F 55 73 65 72 52 65 67 31 UR _ UserReg 1
A010070	3A 32 30 30 02 01 00 04 06 70 75 62 6C 69 63 A2	: 2 0 0 public .
A010080	23 02 04 00 00 00 04 02 01 00 02 01 00 30 15 30	# 0 . 0
A010090	13 06 0B 2B 06 01 04 01 81 A8 25 08 01 00 04 04	. . . + %
A0100A0	45 63 68 6F 30 36 02 01 00 04 06 70 75 62 6C 69	Echo 0 6 publi
A0100B0	63 A3 29 02 01 FF 02 01 00 02 01 00 30 1E 30 1C	c .) 0 . 0
A0100C0	06 0B 2B 06 01 04 01 81 A8 25 07 01 00 04 0D 55	. . + % U
A0100D0	52 5F 55 73 65 72 52 65 67 31 3A 32 DC 00 00 00	R _ UserReg 1 : 2
A0100E0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

6. GPI EVENTS

Use this page to configure the operation of the GPIs. If the GPIs are not used, this page may be left blank.



- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

Save

[Refresh](#)

GPI CONFIGURATION					
GPI#	GPI Label	User Defined "ON" State	User Defined "ON" Mode	Debounce (*10 ms)	Currently
1	GPI_1	OPTO ON ▾	Latch ▾	1 ▾	OFF
2	GPI_2	OPTO ON ▾	Latch ▾	1 ▾	OFF
3	GPI_3	OPTO ON ▾	Latch ▾	1 ▾	OFF
4	GPI_4	OPTO ON ▾	Latch ▾	1 ▾	OFF

PARAMETER	DESCRIPTION
GPI Label:	Enter any 15 characters or symbols. For convenience only. Used in Event Action Table
User Defined ON State:	OPTO ON: The GPI is ON when the opto-isolator is energized (powered). The GPI is OFF when the opto-isolator is de-energized. OPTO OFF: The GPI is ON when the opto-isolator is de-energized. The GPI is OFF when the opto-isolator is energized (powered).
User Defined ON Mode:	LATCHED: The GPI turns ON and stays ON. The GPI turns OFF and stays OFF. MOMENTARY: The GPI turns ON for a short time and then turns OFF and stays OFF. This pattern repeats every time the GPI become active.
Debounce Time:	The time period that the GPI must remain ON to be detected as ON. The selected time is multiplied by 10 milliseconds to compute the actual Debounce time.
Currently:	Current state of GPI as defined by User Defined ON State.

- 1) Click on the GPI EVENTS tab. The GPI Configuration page will be displayed.
- 2) Click on the drop down arrow in each column to view the list of available options/ values. Select the desired option/ value by clicking on it.
- 3) Click in the User Defined ON State column and select the ON state for the GPI.
- 4) Click in the User Defined ON Mode column and select the operating mode for the GPI.
- 5) Click in the Debounce column and select the debounce time for this GPI. (The selected time is multiplied by 10 milliseconds to compute the actual Debounce time.) Debounce time is the time period that the GPI must remain on to be detected as ON.
- 6) Repeat steps 3 - 5 to configure each GPI.
- 7) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

7. GPO ACTIONS

Use this page to configure the operation of the local GPOs. If the GPOs are not used, this page may be left blank.

EB4X

- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

Save
[Refresh](#)

GPO CONFIGURATION						
GPO#	GPO Label	User Defined ON State	Operating Mode	Momentary On Time (*10ms)	Group	Currently
1	GPO_1	Relay Closed ▼	Latch ▼	▼	None ▼	OFF
2	GPO_2	Relay Closed ▼	Latch ▼	▼	None ▼	OFF
3	GPO_3	Relay Closed ▼	Latch ▼	▼	None ▼	OFF
4	GPO_4	Relay Closed ▼	Latch ▼	▼	None ▼	OFF

GPO OPERATING MODE

Each GPO can be configured by the user to operate according to one of the following operating modes. Only one operating mode can be assigned to a GPO at any time. The assignment of a new operating mode automatically overrides the previous operating mode assignment. All GPO configurations are done from the IP Control Buddy's GPO page or the IP Buddy's Event Action Table.

A. MOMENTARY OPERATION

When the controlling switch is pressed, the GPO will immediately turn on and start its ON Time timer. When the user configured time period has elapsed, the GPO will automatically turn OFF regardless of the state of the controlling switch. If the controlling switch is held pressed after the elapsed time or quickly released before the elapse time has expired, the GPO will only turn OFF when the user configured ON Time has elapsed. The controlling switch must be released and then re-pressed before the GPO will turn ON again.

B. FOLLOW/ LATCH OPERATION

When the controlling switch is pressed, the GPO will immediately turn ON. When the controlling switch is released, the GPO will immediately turn OFF. If the controlling switch is held pressed, the GPO will stay ON while the switch is being held. This operation is configured via the IP Buddy's Event Actions table.

C. TOGGLE OPERATION

When the controlling switch is pressed, the GPO will immediately change state. If the GPO was ON, it will turn OFF. If the GPO was OFF, it will turn ON. The GPO will not change state when the controlling switch is released. When the switch is released, the GPO will remain in its last state. This operation is configured via the IP Buddy's Event Actions table.

D. FLIP FLOP MODE OF OPERATION

One switch controls two GPOs. When the switch is pressed and the current status is ON, then the 2nd GPO will be turned ON and the 1st GPO will be turned OFF. When the switch is pressed and the current status is OFF, then the 1st GPO will be turned ON and the 2nd GPO will be turned OFF.

The GPOs can be configured as LATCH or MOMENTARY. The FLIP FLOP operation will be configured on a GPO by GPO basis in the Event Action Table. The FLIP FLOP operation is defined for GPOs located in the same unit, However it can be used for GPOs across multiple IP Buddy units. This operation is configured via the IP Buddy's Event Actions table (See page 12).

E. GROUP (RADIO GROUP) OPERATION

The GPO Group operates like a radio group of interlocked switches. Pressing one switch causes the other switches to automatically release. Only one switch will remain pressed at any time.

A GPO can belong to one and only one GPO Group. More than one GPO Group can exist with each group made up of other GPOs. When a GPO is assigned to a new GPO Group, it is automatically removed from its previous group.

Only one member of a GPO Group can be ON at any time. When a GPO member is turned ON, all of the other members are immediately turned off. The GPO will stay on until another member of the group is turned on. With the exception of powering on the IP Buddy, at least one GPO from the GPO group will be turned on.

F. GPO CONTROL BY SWITCH ON A REMOTE IP CONTROL BUDDY

The GPO can be controlled by a switch on a remote Universal Switch Panel in addition to being controlled by a switch on the same panel. The GPO will operate according to its user configured Operating Mode whenever the local or remote switch is pressed and released.

G. GPO CONTROL BY GTP-32 OR DC20 EVENT

The GPO can be controlled by a GTP-32 or DC20 event— GPI or Combinatorial. It will operate according to its user configured Operating Mode as if a local switch had been pressed or released.

H. GPO CONTROL BY ETHERNET EVENT

The GPO can be controlled by an incoming Ethernet command string/event. It will operate according to its user configured Operating Mode as if a local switch had been pressed or released.

PARAMETER	DESCRIPTION
GPO Label:	Enter any 15 characters or symbols. For convenience only, used in Event Action Table.
User Defined ON State:	<p>RELAY OPEN: The relay is OPEN when the GPO is ON. The relay is CLOSED when the GPO is OFF.</p> <p>RELAY CLOSED: The relay is CLOSED when the GPO is ON. The relay is OPEN when the GPO is OFF (Factory Default).</p>
User Defined Operating Mode:	<p>MOMENTARY: The GPO turns ON, waits for the MOMENTARY ON TIME to expire, and then automatically turns OFF.</p> <p>LATCH: The GPO turns ON and stays ON. The GPO turns OFF and stays OFF.</p>
Momentary ON Time:	For MOMENTARY operating mode only. ON duration for Momentary GPO. Drop down menu settable from 0.01 sec to 2.0 sec.
Group:	Radio Group RG1 - RG4: Only one GPO in a Group can be ON at a time. Before a GPO is turned ON, all of the other GPOs in the group are immediately turned off. (Break before make)
Currently:	Current state of GPO as defined by User Defined ON State.

- 1) Click on the GPOs button. The GPO Configuration page will be displayed.
- 2) Click on the drop down arrow in each column to view the list of available options/ values. Select the desired option/ value by clicking on it.
- 3) Click in the User Defined ON State column and select the desired ON state of the GPO.
- 4) Click in the Operating Mode column and select the operating mode for the GPO.
- 5) If Operation Mode= Momentary, click in the Momentary ON Time column and select the ON duration for the GPO. This is the amount of time the GPO will stay on before automatically turning OFF. (The selected time is multiplied by 10 milliseconds to compute the actual ON time.)
- 6) Repeat steps 3 - 5 to configure each GPO.
- 7) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

8. REMOTE DEVICE ASSIGNMENT

Use this page to identify the remote USP's, GTP-32's, AIB's, IP Control Buddy's or other devices that the local IP Control Buddy will communicate with. If the IP Control Buddy will operate standalone, this page may be left blank.

DNF
EB4X

Home

GPI Events

GPI Actions

Remote Device Assignment

Key Mapper

GTP-32/DC20 Receive Events

Serial Port Configuration

AHSC TX Actions

AHSC RX Events

HTTP GET / POST Actions

SNMP TX/RX Actions

HRM Configuration

Event Action Table

Tally Assignment

Log Out

System Configuration

Device Type = Other, this device listens on ports **50001- 50008** for TCP Server, UDP, and SNMP communication.

Remote Device 1: 50001
 Remote Device 2: 50002
 Remote Device 3: 50003
 Remote Device 4: 50004
 Remote Device 5: 50005
 Remote Device 6: 50006
 Remote Device 7: 50007
 Remote Device 8: 50008

For UDP and SNMP transmits, the source port number is the same as the listen port number.

Device Type = USP, GTP-32/DC20, or PKM
 This device listens on port 161 and transmits using source port number 161.

Device Type = Other & **Connection Type** = TCP or HTTP:
 Key controlling or talking remote device will flash red when AIB of IP is not successful or can not establish connection to remote device.

Connection Type = TCP and **Connection Mode** = Server Receive Transmit
 Set IP Address to 0.0.0.0 to accept connection from any remote device.
 Otherwise, only connection from remote device with entered IP address will be accepted.
 If multiple Devices are listening on Port 50001, set remote device IP addresses to 0.0.0.0
 When multiple Devices are listening on Port 50001, connections are assigned randomly to listening Devices.

Device Type = Other & **Connection Type** = SNMP TRAP
 This device listens on port 162 for SNMP Trap messages.
 Transmit is not supported.

Communication Error = 3 missed Heartbeat or Comm Time Periods

[Refresh](#)

REMOTE DEVICE LIST											
Device #	Remote Device Label	Device Type	Primary /Backup Pair	Connection Type	Connection Mode	UDP Attempts	IP Address / URL <small>Add single forward slash / before URL. Do not add http:// or quotes to URL.</small>	URL IP	Port Number	Heartbeat/Comm Period (seconds)	Connection Status
1	GTP_32	GTP-32/DC20	None				192.168.10.233	0	0	5	Connected
2	Remote Device 2	USP					0.0.0.0	0	0	5
3	Remote Device 3	USP					0.0.0.0	0	0	5
4	Remote Device 4	USP					0.0.0.0	0	0	5
5	Remote Device 5	USP					0.0.0.0	0	0	5
6	Remote Device 6	USP					0.0.0.0	0	0	5
7	Remote Device 7	USP					0.0.0.0	0	0	5
8	Remote Device 8	USP					0.0.0.0	0	0	5
9	SERIAL									DISABLED

PARAMETER	DESCRIPTION
Remote Device Label:	Enter a unique device description/ identifier, up to 32 characters in length that clearly identifies the remote device. This description/ identifier will appear in the remote device list that is used on the other configuration pages.
Device Type:	<p>GTP-32/DC20: Select to connect to a DNF GTP-32 or DC20/21.</p> <p>USP: Select to connect to other DNF Controls Universal Switch Panels, AnyWhere Interface Boxes or IP Control Buddy's.</p> <p>USP3-API: Select to connect to a 3rd party for direct control over the USP3.</p> <p>PKM: Use to connect to PC for Keymapper functionality.</p> <p>OTHER: Select to connect to other Ethernet devices.</p>
Connection Type:	For OTHER Device Types only- Select UDP, SNMP, SNMP Trap, TCP/IP or HTTP GET/POST

Connection Mode:	<p><u>For TCP/IP Only</u></p> <p>Client Transmit: Establish connection to remote device. Transmit command. Disconnect from remote device.</p> <p>Client Transmit/Receive: Establish connection to remote device. Maintains connection to remote device.</p> <p>Server Receive/Transmit: Accept connection from client. Only client at assigned IP Address can connect. The client is responsible for maintaining connection.</p> <p><u>Server Mode only</u></p> <p>IP Buddy listens on the following ports: Port 50001 for connection from Remote Device 1 Port 50002 for connection from Remote Device 2 Port 50003 for connection from Remote Device 3 Port 50004 for connection from Remote Device 4</p>
UDP Attempts:	<p><u>For UDP Connection Type only.</u></p> <p>The number of times that the message will be sent separated by 10 milliseconds. Since UDP does not provide guaranteed delivery, UDP Attempts provides more than one transmit attempt to deliver the message.</p>
IP Address / URL:	Enter the IP address or URL for the remote device to be controlled or monitored.
URL IP:	Display the IP address associate with URL.
Port Number:	<p>Destination port number for transmit actions</p> <p>Source port number for receive events. Set to '0' to receive events from any port number at remote device IP address.</p>
Heartbeat Rate:	<p><u>For USP and GTP-32/DC20 Device Types.</u></p> <p>Default value is 5 seconds. Communication error is defined as loss of two consecutive heartbeats.</p>
Connection Status:	<p><u>For USP and GTP-32/DC20 device types and TCP/IP connection types only</u></p> <p>Displays "Connected" in green when communicating with remote device</p> <p>Displays "-----" when NOT communicating with remote device or no IP address has been entered.</p>
Save Button:	Click on Save button to save entered settings
Refresh Link:	Click on Refresh link to refresh Connection Status

- 1) Click on the Remote Device Assignment button. The Remote Device Assignment page will be displayed.
- 2) Click in the DEVICE Description field and enter a unique description/ identifier, up to 32 characters in length. This description/ identifier will appear in the remote device list that is used on the other configuration pages.
- 3) Click in the DEVICE TYPE dropdown field and select the correct device type for the remote device.

- 4) Click in the IP ADDRESS field and enter the IP Address for this device.
- 5) Click on the down arrow in the Heartbeat Rate column and select the number of seconds between heartbeats. For local LAN, use a small value. For WAN or internet use a larger value.
- 6) Repeat steps 2) thru 4) for each remote device that the IP Control Buddy will communicate with.
- 7) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

NOTE- To clear a remote device assignment, set the IP address to 0.0.0.0 and delete the Device Description.

9. KEY MAPPER

Use this page to configure the operation of the Key mapper functions. If the Key mapper functions are not used, this page may be left blank.

EB4X

Home

GPI Events

GPO Actions

Remote Device Assignment

Key Mapper

GTP-32/DC20 Receive Events

Serial Port Configuration

AHSC TX Actions

AHSC RX Events

HTTP GET / POST Actions

SNMP TX/RX Actions

MEM Configuration

Event Action Table

Tally Assignment

Log Out

System Configuration

USAGE:
LABEL- Enter any 32 characters to identify key function. For user convenience only. Labels displayed in Switch Assignment Table.
KEY- Select key on PC keyboard.
MODIFIER- Select CTRL, SHIFT, ALT or combination.

KEY MAPPER LIST			
Line#	Label	Key	Modifier
1	KM_1	NONE	
2	KM_2	NONE	
3	KM_3	NONE	
4	KM_4	NONE	
5	KM_5	NONE	
6	KM_6	NONE	
7	KM_7	NONE	
8	KM_8	NONE	
9	KM_9	NONE	
10	KM_10	NONE	
11	KM_11	NONE	
12	KM_12	NONE	
13	KM_13	NONE	
14	KM_14	NONE	
15	KM_15	NONE	
16	KM_16	NONE	
17	KM_17	NONE	
18	KM_18	NONE	
19	KM_19	NONE	
20	KM_20	NONE	
21	KM_21	NONE	
22	KM_22	NONE	
23	KM_23	NONE	

The Key Mapper function is a function that maps IP Control Buddy key presses to HOTKEYS for Editors, Graphic devices, Production Playout & Automation systems, as well as other Windows based applications.

For example, map IP Buddy Key: #2 to "SHIFT F3"
 #10 to "CTRL SHIFT F10"
 #23 to "CTRL ALT F1"

The IP Control Buddy connects to the Windows computer running Panel Key Mapper (pkm.exe) over an Ethernet connection, eliminating USB connectivity issues in mission critical applications. When a IP Control buddy key is pressed, the assigned Key Mapper List entry is transmitted to the Panel Key Mapper application, pkm.exe, running on the Microsoft Windows based remote device.

The Key Mapper List Web page contains 48 entries. Select an entry in the Key Mapper list web page to create

the HOTKEY key combination used by the Editor or other Windows application. Use the Event Action Table to map a key press to one or more Key Mapper entries and to transmit the HOTKEY to a remote device. One HOTKEY can be sent to multiple remote devices.

PARAMETER	DESCRIPTION
Label:	Enter any 32 characters or symbols. For convenience only. Used in Event Action Table
Key:	Select PC Keyboard key from drop down menu
Modifier:	Select NONE or CTRL, SHIFT, ALT combination

- 1) Click on the Key Mapper tab. The Key Mapper page will be displayed.
- 2) Click in the Label field and enter the desired User label.
- 3) Click on the drop down arrow in the KEY column to view the list of available PC Keyboard Keys. Select the desired option/ value by clicking on it.
- 4) Click on the drop down arrow in the MODIFIER column to view the list of available PC Keyboard Modifiers. Select the desired option/ value by clicking on it.
- 5) Repeat steps 2 - 4 to configure each Key Mapper list entry.
- 6) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

10. GTP-32 / DC20 RECEIVE EVENTS

Use this page to configure events coming from a GTP-32/DC20. If a GTP-32/DC20 is not used, this page may be left blank.

EB4X

- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

GTP-32/ DC20 RECEIVE EVENTS			
Line#	Event Label	GTP-32/ DC20 Event Label	User Register Value (for UR_labels only)
1	GTP_GPI_1	GPO_1	
2	GTP_GPO_1	GPI_1	
3	GTP_UR_1	UR_UserReg1	
4	EVENT LABEL 4		1
5	EVENT LABEL 5		
6	EVENT LABEL 6		
7	EVENT LABEL 7		
8	EVENT LABEL 8		
9	EVENT LABEL 9		
10	EVENT LABEL 10		
11	EVENT LABEL 11		
12	EVENT LABEL 12		
13	EVENT LABEL 13		
14	EVENT LABEL 14		
15	EVENT LABEL 15		
16	EVENT LABEL 16		

The GTP-32/DC20 Receive Events page allow for a GTP-32/DC20 source event or action to be configured as a local source event on an IP Control Buddy. When a source event or action occurs on a GTP-32/DC20 that is configured in the remote device assignment table, the source event/action is transmitted to the IP Control Buddy panel.

NOTE – The Event Notification Page of the GTP-32/DC20 must be configured properly in order for successful operation.

The GTP-32/DC20 Receive Events page contains 16 entries. Select an entry in the GTP-32/DC20 Receive Events page to create the GTP-32/DC20 receive event. Use the Event Action Table to map the GTP-32/DC20 receive event to an action. One GTP-32/DC20 receive event can control multiple actions.

The GTP-32/ DC20 Receive Event type event is only displayed in the Event Action Table for Remote Devices of Device Type "GTP-32/ DC20".

PARAMETER	DESCRIPTION
Event Label:	Enter any 32 characters. This label is used in the Event Action Table.
GTP-32/ DC20 Event label:	Enter the GTP-32 or DC20 Event Label to tally. This Event Label must be listed in the GTP-32/ DC20's Event Notification Table with the IP address of this IP Buddy. The entered Event Label must exactly match the event label in the Event Notification Table.
User Register Value:	For use with "UR_" event labels only. Enter a value '1' to '255': When the received User Register value matches the entered value, the event turns ON. Note- '0' value is treated as an OFF state

- 1) Click on the GTP-32/DC20 Receive Events tab. The GTP-32/DC20 Receive Events page will be displayed.
- 2) Click in the Event Label field and enter the desired User label.
- 3) Click in the GTP-32/DC20 Event Label field and enter the event label of the source/action found on the GTP-32/DC20. This event label must match every character as defined on the GTP-32/DC20.
- 4) If the event being received from a GTP-32/DC20 is a User register, enter the value of the User register in the User Register value field.
- 5) Repeat steps 2 - 4 to configure each GTP-32/DC20 Receive Events list entry.
- 6) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

11. SERIAL PORT CONFIGURATION

Use this page to configure the serial port of the IP Control Buddy. If the serial port is not used, this page may be left blank.



- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration**
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

SERIAL PORT CONFIGURATION	
PORT CONFIGURATION:	RS422 CTRL ▾
BAUD:	38400 ▾
PARITY:	ODD ▾
DATA BITS:	8

Save

PARAMETER	DESCRIPTION
Port Configuration:	RS232 DTE, RS422 Controller or RS422 Device
Baud Rate:	300, 1200, 2400, 4800, 9600,19200, 38400
Parity:	None, Odd, Even
Data Bits:	Fixed at 8
Stop Bits:	Fixed at 1
Start Bits:	Fixed at 1

- 1) Click on the Serial Port Configuration tab. The Serial Port Configuration page will be displayed.
- 2) Click on the Port Configuration dropdown and select the desired port configuration.
- 3) Click on the Baud dropdown to select the correct baud rate.
- 4) Click on the Parity dropdown to select the correct parity setting.
- 5) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

12. AHSC TRANSMIT ACTION

Use this page to configure the AHSC Transmit commands. If AHSC Transmit commands are not used, this page may be left blank.


EB4X

[Home](#)

[GPI Events](#)
[GPO Actions](#)

[Remote Device Assignment](#)

[Key Mapper](#)

[GTP-32/DC20 Receive Events](#)

[Serial Port Configuration](#)
[AHSC TX Actions](#)
[AHSC RX Events](#)

[HTTP GET / POST Actions](#)

[SNMP TX/RX Actions](#)

[MEM Configuration](#)

[Event Action Table](#)

[Tally Assignment](#)

[Log Out](#)

[System Configuration](#)

USAGE:
Action Label is 1 - 32 characters in length. Use 'A' - 'Z', 'a' - 'z', and '0' - '9'. Label is for convenience only. Used in Event Action Table.

ASCII/HEX Command is 1 - 256 characters in length.
Use %xy to enter HEX value. x and y are values 0 - 9 or A - F. Two characters must follow %.
Use %BR to add serial BREAK (18 bit times). Valid only at beginning of command followed by at least one character.
Use %Wttt to add WAIT. Transmit command up to %WT. Wait tt time, 001 - 999 milliseconds. Transmit next part of command.
NOTE:-%WT is only an approximate wait time.

NOTE: Spaces between characters are NOT transmitted. Use %20 to transmit a space character.

AHSC TRANSMIT ACTIONS		
Line#	Action Label	ASCII/HEX Command
1	AHSC Transmit 1	123456798
2	AHSC Transmit 2	teste
3	AHSC Transmit 3	
4	AHSC Transmit 4	
5	AHSC Transmit 5	
6	AHSC Transmit 6	
7	AHSC Transmit 7	
8	AHSC Transmit 8	
9	AHSC Transmit 9	
10	AHSC Transmit 10	
11	AHSC Transmit 11	
12	AHSC Transmit 12	
13	AHSC Transmit 13	
14	AHSC Transmit 14	
15	AHSC Transmit 15	
16	AHSC Transmit 16	
17	AHSC Transmit 17	
18	AHSC Transmit 18	

The AHSC Transmit action transmits a user entered group of characters to the user assigned IP Address and Port Number as assigned in the Remote Device Assignment page.

PARAMETER	DESCRIPTION
Action Label	Enter any 32 characters. This label is used in the Event Action Table.
ASCII/ HEX Command	<p>The ASCII/HEX Command is 1 - 256 characters in length.</p> <p>Use %yz to enter a HEX value. 'y' and 'z' are values 0 - 9 or A- F. Two characters must follow %.</p> <p>Use %WTttt to add a WAIT time, 001 - 999 milliseconds. Three numbers must follow %WT. The characters preceding %WT are sent immediately. The characters after %WTttt are sent after the wait time expires. More than one %WT can be included in a command.</p> <p>NOTE- %WT is only an approximate wait time.</p> <p>NOTE- Spaces between characters are NOT transmitted. Use %20 to transmit a space character.</p> <p><u>For SERIAL only</u></p> <p>Use %BR to add a BREAK character as the first transmitted character.</p>

- 1) Click on the AHSC TX Actions tab. The AHSC TX Actions page will be displayed.
- 2) Click in the Action Label field and enter the desired User label.
- 3) Click in the ASCII/HEX Command field and enter the desired ASCII/HEX Transmit command.
- 5) Repeat steps 2 - 3 to configure each Transmit Action Command entry.
- 6) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

13. AHSC RECEIVE EVENT

Use this page to configure the AHSC Transmit commands. If AHSC Transmit commands are not used, this page may be left blank.

DMF CONTROLS EB4X

Home

GPI Events

GPO Actions

Remote Device Assignment

Key Mapper

GTP-32/DC20 Receive Events

Serial Port Configuration

AHSC TX Actions

AHSC RX Events

HTTP GET / POST Actions

SNMP TX/RX Actions

MEM Configuration

Event Action Table

Tally Assignment

Log Out

System Configuration

USAGE:
Event Label is 1 - 32 characters in length. Use 'A' - 'Z', 'a' - 'z', and '0' - '9'. Label is for convenience only. Used only in Event Action Table.

ASCII/HEX Receive Data is 1 - 48 character patterns in length, after converting entries to 8-bit data values. Use %yz to enter a HEX value. y and z are values 0 - 9, A- F, or 'X'. Two characters must follow '%'. Use %Xz to match only z. Use %yX to match only y. Use %XX to ignore value.

Use #yyyyyyyy to match an exact bit pattern. Y values are '0', '1', or 'X' (don't care). Use <yyyyyyyy to match any bit in the bit pattern. Y values are '0', '1', or 'X' (don't care).

Use '!' to NOT match a character pattern.
Example: Event Label= TEST. Receive Data= !A If any character other than 'A' is received, then TEST event is ON. If 'A' is received, then TEST event is OFF.
Use !y, !%yz, or !#yyyyyyyy to specify a NOT pattern match.

NOTE- Spaces between patterns are ignored. Use %20 to match a space character.

Save

Line#	Event Label	AHSC
1	Match Command	COMMAND1
2	Match Hex values	%01%02%03%04
3	Match Exact Bit Pattern Hex A5	#10100101
4	Match Any Bits in HEX A5	<10100101
5	AHSC Receive 5	
6	AHSC Receive 6	
7	AHSC Receive 7	
8	AHSC Receive 8	
9	AHSC Receive 9	
10	AHSC Receive 10	
11	AHSC Receive 11	
12	AHSC Receive 12	
13	AHSC Receive 13	
14	AHSC Receive 14	
15	AHSC Receive 15	

The AHSC Receive Events monitors a user entered group of characters from a user assigned IP Address and Port Number as assigned in the Remote Device Assignment page.

Monitor serial and Ethernet data for specific ASCII characters, hex values, or binary bits. Match an exact character pattern i.e.: "ABCDEF" or match a partial pattern i.e.: "A*C**F". Match the most or least significant half of a hex value. Match a specific on/off bit pattern

- i.e.: 00110010, match a partial bit pattern
- i.e.: **1100*0, or match any specific bits as on or off
- i.e.: xx1x0x1x.

A Serial Receive and Ethernet Receive event turns ON, when received data matches the assigned, user entered data pattern, and then triggers an ON ACTION. Receive events do not trigger OFF ACTIONS. The Ethernet Receive data must come from the assigned IP address and Port number.

Use the "NOT" option to monitor system operation for abnormal status.

Pattern matching examples can be found in the back of this manual.

PARAMETER	DESCRIPTION
Event Label:	Enter any 32 characters. This label is for convenience only and is used in the Event Action Table.
ASCII/ HEX Receive Data:	<p>Enter 1- 16 characters and/or bit patterns to match against received serial data.</p> <p>The received characters must exactly match the order and value of the entered patterns. If a received character does not match the entered pattern, all previous matches are discarded and the match process begins again with the first entered pattern. If more than 1 second elapses between received characters, all previous matches are discarded and the match process begins again.</p> <p>Use %yz to enter a HEX character. 'y' and 'z' are values 0 - 9, A - F, or 'X' (don't care).</p> <p>Enter %Xz to match only the z part of the HEX character. Enter %yX to match only the y part of the HEX character. Enter %XX to ignore the received value.</p> <p>Use #yyyyyyy to match an exact bit pattern. 'y' values are '0', '1', or 'X' (don't care). For example, enter #0XXX1XXX to match bit7= 0 and bit3= 1. Bit0 is on the far right. Bit7 is on the far left.</p> <p>Use <yyyyyyy to match any bit in the bit pattern. 'y' values are '0', '1', or 'X' (don't care). For example, enter <0XXX1XXX to match bit7=0 or bit3= 1. Bit0 is on the far right. Bit7 is on the far left.</p> <p>Use '! ' to NOT match a character pattern. For example: Event Label= TEST. Receive pattern= !A. If any character other than 'A' is received, then TEST event is ON. If 'A' is received, then TEST event is OFF. Use !y, !%yz, or !#yyyyyyy to specify a NOT pattern match.</p> <p>NOTE- Spaces between patterns are ignored. Use %20 to match a space character.</p>

- 1) Click on the AHSC TX Actions tab. The AHSC TX Actions page will be displayed.
- 2) Click in the Action Label field and enter the desired User label.
- 3) Click in the ASCII/HEX Command field and enter the desired ASCII/HEX Transmit command.
- 4) Repeat steps 2 - 3 to configure each Transmit Action Command entry.
- 5) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

14. HTTP GET / POST ACTIONS

Use this page to configure the HTTP GET/POST commands. If HTTP GET/POST commands are not used, this page may be left blank.

The screenshot shows the 'HTTP GET / POST Transmit Actions' configuration page. It features a sidebar with navigation options and a main table for configuring actions. The table has columns for Entry #, Label, Mode, Path, Ver, Content-Type, and Data. Each entry also includes a 'Header' section with 'Header:' and 'Value:' fields. A 'Save' button is located at the top right of the table area.

Entry #	Label	Mode	Path	Ver	Content-Type	Data	Header	Value
1	D_BLACKOU	PUT	/contents/1/filters/7	HTTP/1.1	application/xml	<filter><filter_settings><enabled>true</enabled></filter_settings></filter>	Header: Accept	Value: application/xml
2	HTTP POST 2	PUT	/contents/1/filters/7	HTTP/1.1	application/xml	<filter><filter_settings><enabled>true</enabled></filter_settings></filter>	Header: Accept	Value: application/xml
3	HTTP POST 3	PUT		HTTP/1.0	application/x-www-form-urlencoded		Header:	Value:
4	HTTP POST 4	POST		HTTP/1.0	application/x-www-form-urlencoded		Header:	Value:

The Hypertext Transfer Protocol (HTTP) is designed to enable communications between clients and servers. HTTP works as a request-response protocol between a client and server.

Two commonly used methods for a request-response between a client and server are: GET and POST.

GET - Requests data from a specified resource

POST - Submits data to be processed to a specified resource

PARAMETER	DESCRIPTION
Action Label:	Enter any 32 characters. This label is used in the Event Action Table.
Mode:	Use the dropdown to select between HTTP "POST" and HTTP "GET".
Path:	Define the path of the HTTP "POST" or "GET".
Ver:	Use the dropdown to select between "HTTP/1.0" and "HTTP/1.1".
Header:	Enter the header data of the HTTP "POST" or "GET".
Value:	Enter the value data of the HTTP "POST" or "GET".

Content-Type:	Options available: <ul style="list-style-type: none"> • Text/plain • Text/HTML • Application/XML • Application/JSON • Application/x-www-form-urlencoded
Data:	Enter the data of the HTTP "POST" or "GET".

- 1) Click on the HTTP GET/POST Actions tab. The HTTP GET/POST Actions page will be displayed.
- 2) Click in the Label field and enter the desired User label.
- 3) Click on the Mode dropdown and select the desired HTTP mode.
- 4) Click in the Path field and enter the desired HTTP GET/POST path.
- 5) Click on the VER dropdown to select the correct HTTP version.
- 6) Click in the Header field to enter the desired HTTP GET/POST header.
- 7) Click in the Value field to enter the desired HTTP GET/POST value.
- 8) Click on the Content-Type dropdown and select the desired content-type format.
- 9) Click in the Data field to enter the desired HTTP GET/POST command data.
- 10) Repeat steps 2 - 9 to configure each HTTP GET/POST Command entry.
- 11) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

15. SNMP TX/RX ACTIONS

Use this page to configure the SNMP TX/RX actions. If SNMP TX/RX commands are not used, this page may be left blank.

USAGE:
 Action Label is 1 - 32 characters in length. Use 'A'-'Z', 'a'-'z', and '0'-'9'. Label is for convenience only. Used in Event Action Table.
 Community string is 1 - 32 characters in length. Typical value is 'public'.
 Use dot notation to enter Object Identifier(OID). Use decimal values only. (e.g. 1.2.3.4.5.6.7.8) Maximum decimal value is 99999999
OID VALUE Type:
 Integer: Valid decimal values: 0 - 999999
 Octet Integer: Valid decimal values: 0 - 9999999
 Octet String: ASCII or HEX characters
 Use %x to enter HEX value. x and y are values 0 - 9 or A - F. Two characters must follow %.
SNMP Receive Events:
 Received OIDs must start with 1.3.6.1.4.1 to be processed. Contact DNF Control for other formats. Is(1).org(2).asn(6).internet(1).private(4).enterprise(1)
 The received Community String, Command, OID, OID Value Type, and OID Value must match an entry in this table to trigger an Action in the Event Action Table.
 Received OIDs with NULL or ANY OID Value Type will be processed as momentary events. All other OID Value types will be processed as latching events.
 Command TRAP will support partial OID match.
 Enter the beginning OID values followed by '*' (e.g. 1.2.3.4.5.6.7*)
 All received OIDs whose beginning values match the entered values will be treated as an OID match.
 Command TRAP, VALUE TYPE= Octet String will support partial value match.
 Enter '1' followed by group of words, followed by ':' (e.g. match these:|group of words)
 The received OID value will be searched for "match these" and then "group of words"
 All of the entered words/characters must be present and ordered as entered for a match.

Save

SNMP TRANSMIT ACTIONS / RECEIVE EVENTS						
Line#	Event/Action Label 32 characters maximum	Community 16 characters maximum	Command	OID 100 characters maximum Use dot notation with decimal values	VALUE TYPE	OID VALUE 100 characters maximum
1	SNMP Tab.1		SET		Null	
2	SNMP Tab.2		SET		Null	
3	SNMP Tab.3		SET		Null	

Simple Network Management Protocol (SNMP) is an Internet Standard protocol for collecting and organizing information about managed devices on IP networks and for modifying that information to change device behavior.

Line#	Event/Action Label 32 characters maximum	Community 16 characters maximum	Command
-------	---	------------------------------------	---------

PARAMETER	DESCRIPTION
Event/Action Label:	Enter any 32 characters. This label is for convenience only and is used in the Event Action Table.
Community:	Community string is 1 - 32 characters in length. Typical value is 'public'.
Command:	SET, GET, GET RESPONSE or TRAP (RX ONLY)

SNMP TRANSMIT ACTIONS / RECEIVE EVENTS	
OID	100 characters maximum Use dot notation with decimal values

PARAMETER	DESCRIPTION
Object Identifier (OID):	The OID is 8 - 256 decimal values in length entered in dot notation. Only decimal values are accepted. ie: 1.22.333.4.55.666.7.88. Maximum entered decimal value is 99999999.

VALUE TYPE	OID VALUE 100 characters maximum
Null	

PARAMETER	DESCRIPTION
Value Type/ OID Value:	<p><u>OID Value Type:</u></p> <p>Integer: Enter decimal value 0 - 999999 for OID value.</p> <p>Octet Integer: Enter decimal value 0 - 999999 for OID value.</p> <p>Octet String: Enter 16 alphanumeric characters.</p> <p>NULL: Set to NULL when no OID value is entered.</p> <p>ANY: Any of the options available.</p>

- 1) Click on the SNMP TX/RX Actions tab. The SNMP TX/RX Actions page will be displayed.
- 2) Click in the Event/Action Label field and enter the desired User label.
- 3) Click in the Community field to add the desired community string.
- 4) Click on the Command dropdown and select the desired command format.
- 5) Click in the OID field and enter the OID.
- 6) Click on the Value Type dropdown to select the correct OID value type.
- 7) Repeat steps 2 - 6 to configure each SNMP TX/RX Action entry.
- 8) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

16. MEM CONFIGURATION

Use this page to configure the local MEMS. If MEMS are not used, this page may be left blank.

DNF
CONTROLS
EB4X

- Home
- GPI Events
- GPO Actions
- Remote Device Assignment
- Key Mapper
- GTP-32/DC20 Receive Events
- Serial Port Configuration
- AHSC TX Actions
- AHSC RX Events
- HTTP GET / POST Actions
- SNMP TX/RX Actions
- MEM Configuration
- Event Action Table
- Tally Assignment
- Log Out
- System Configuration

[Refresh](#)

NOTE: Radio Group setting used by MEM ON Action only

MEM CONFIGURATION			
MEM#	MEM Label	Radio Group	Currently
1	MEM_1	None ▼	OFF
2	MEM_2	None ▼	OFF
3	MEM_3	None ▼	OFF
4	MEM_4	None ▼	OFF
5	MEM_5	None ▼	OFF
6	MEM_6	None ▼	OFF
7	MEM_7	None ▼	OFF
8	MEM_8	None ▼	OFF
9	MEM_9	None ▼	OFF
10	MEM_10	None ▼	OFF
11	MEM_11	None ▼	OFF
12	MEM_12	None ▼	OFF
13	MEM_13	None ▼	OFF
14	MEM_14	None ▼	OFF
15	MEM_15	None ▼	OFF
16	MEM_16	None ▼	OFF

MEM's are used to save an Event IN's ON or OFF state and trigger an ON or OFF ACTION. MEMs are also used on the Tally Assignment web page to control LCD Key text and color.

In the Event Action Table, an Event IN can turn ON, turn OFF or TOGGLE the state of a MEM. Also, a MEM can be used as an Event IN to trigger an ON or OFF ACTION.

For example, a MEM can be used to convert a momentary event into a latching tally. VTR Play status turns on MEM 1. VTR Stop status turns off MEM 1. The LCD Key tallying MEM 1 displays PLAY when MEM 1 is on and STOP when MEM 1 is off.

Please refer to section 18 for example of MEMs FLIP FLOP and RADIO GROUP.

PARAMETER	DESCRIPTION
MEM Label:	Enter any 32 characters. This label is for convenience only and is used in the Event Action Table.
Radio Group:	Select from "RG1 - RG6" to put the selected mem into a radio group.

- 1) Click on the MEM Configuration tab. The MEM Configuration page will be displayed.
- 2) Click in the MEM Label field and enter the desired MEM label.
- 3) Click on the Radio Group dropdown to assign the MEM to a radio group.
- 4) Repeat steps 2 - 3 to configure each MEM entry.
- 5) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

17. EVENT ACTION TABLE

Use this page to assign a Source Event to an Action. An action will not trigger unless it is mapped to a source event on the Event Action Table.

Line#	EVENT IN			ON ACTION			OFF ACTION		
	Source	Event Type	Event	Local/Remote Device	Type	Action Label	Local/Remote Device	Type	Action Label
1	Local	Key Press	3	Local	GPO TOGGLE	GPO_1	Local	Do Nothing	
2	Local	Key Press	4	Local	GPO TOGGLE	GPO_2	Local	Do Nothing	
3	Local	Key Press	1	Local	MEM ON	MEM_1	Local	Do Nothing	
4	Local	Key Press	2	GTP_32	Key Press		GTP_32	Key Release	
5	Local	Key Press	3	Local	GPO ON	GPO_3	Local	GPO OFF	GPO_3
6	Local	Key Press	4	Local	GPO ON	GPO_4	Local	GPO OFF	GPO_4
7	None								
8	None								
9	None								
10	None								
11	None								
12	None								
13	None								
14	None								
15	None								
16	None								
17	None								
18	None								
19	None								
20	None								
21	None								
22	None								
23	None								
24	None								
25	None								
26	None								

On an Event Action Table line, select an EVENT IN (left side of the table) then select an ACTION (right side of the table). Some events only support ON ACTIONS, so the OFF ACTION entries will be grayed out.

One EVENT IN can trigger more than one ACTION. Select the same EVENT IN on multiple lines and then select an ON or OFF ACTION on each line.

Only EVENTS and ACTIONS associated with the Remote Device's Device Type or Connection Type will be displayed in the drop down menus. If the desired event or action is not displayed, then go to the Remote Device Assignment web page and change the Device Type or Connection Type for the Remote Device.

There are 16 Sequence Timers. Use each Sequence Timer event number in multiple lines as the Event Type to create a sequence of actions. The first Sequence entry from the top of the table will be the first sequence action. The next Sequence entry from the top of the table will be the next sequence action. The Event column time is the delay before that line's action will execute. Use Sequence Start action to start a sequence. Use Sequence Stop/ Reset to stop a sequence. The Sequence will always start at its first line.

An "Override Local Action" link lets users execute the ON or OFF Actions of a given Event Action Table line without triggering the source event.

Override Local Action		
Line#	Action	
1	OFF Action	Execute
	ON Action	
	OFF Action	

E V E N T I N	Source	None (Greys out line) Local Event Remote Device Event Serial
	Event Type	<p>Local:</p> <p>Keypress Keypress changed from OFF to ON. The selected ON ACTION will execute. Keypress changed from ON to OFF. The selected OFF ACTION will execute</p> <p>GPI GPI changed from OFF to ON. The selected ON ACTION will execute. GPI changed from ON to OFF. The selected OFF ACTION will execute</p> <p>MEM MEM changed from OFF to ON. The selected ON ACTION will execute. MEM changed from ON to OFF. The selected OFF ACTION will execute</p> <p>Sequence Timer The sequence timer's time has expired. Only ON ACTION is executed. The timer automatically restarts for the time period of the next sequence event in the table. After the last sequence event in the table has expired and its ON ACTION executed, the timer automatically restarts for the time period of the first sequence event in the table. MANUAL EVENT - Sequence time is ignored.</p> <p>Continuous Timer The Continuous timer's time has expired. Only ON ACTION is executed. The timer automatically starts once "Save" is pressed in the Event Action table. After the timer has expired and its ON ACTION executed, the timer automatically restarts for the time period setup in the Event Action table.</p>
		<p>Remote:</p> <p>AHSC Receive Event A successful pattern match has occurred for the selected AHSC Receive Event pattern on the selected Remote Device. Only ON ACTION is executed. If the AHSC Receive Event pattern is assigned to multiple Remote Devices, only the ON ACTION associated with the Remote Device that received the successful match will execute.</p> <p>GTP-32/DC20 Receive (Only available for Device Type "GTP-32/DC20") An Event Label was received that matched the selected GTP-32/DC20 Event Label on the selected Remote Device. Only ON ACTION is executed. If an Event Label is assigned to multiple Remote Devices, only the ON ACTION associated with the sending Remote Device will execute.</p> <p>USP Keypress (Only available for Device Type "USP") An event (Keypress or GPI) was received that matched the selected event on the selected Remote Device.</p>
Event	GPI Number, AHSC Receive Event Label, Ethernet Receive Event Label, or GTP-32/DC20 Event Label, Sequence Timer time period. The display labels in the drop down menus are the same user entered labels on the event web pages	

O N A C T I O N	Local / Remote	Execute Action on Local IP Buddy Execute Action on Remote
	Type	<p>Local:</p> <p>GPO Do Nothing Turn GPO ON Turn GPO OFF</p> <p>MEM Do Nothing Turn MEM ON Turn MEM OFF</p> <p>Sequence Start Start identified sequence at its first line in the Event Action Table.</p> <p>Sequence Stop / Reset Immediately stop sequence.</p> <p>Sequence Toggle Toggle current sequence.</p> <p>Sequence Repeat Repeat current sequence</p> <p>Sequence Next Allows Manual Sequence operation.</p> <p>Key Enable Turn ON Key Enable Turn OFF Key Enable Toggle Key Enable</p> <p>Redundant Turn ON Redundant Mode Turn OFF Redundant Mode Toggle Redundant Mode</p> <p>Main/Backup Select MAIN Select BACKUP Toggle between MAIN/BACKUP</p> <p>Restart Timer Restarts the currently selected timer in the Event Action Table.</p>

	<p>Remote:</p> <p>AHSC Transmit Action</p> <p>Transmit the selected AHSC Action command. If command contains WAIT (%WT), then transmit all characters prior to %WT, wait for the time period defined by %WT, and then transmit the remaining characters or until the next %WT. A command may contain more than one %WT.</p> <p>GTP-32/ DC20 (Only available for Device Type "GTP-32/DC20")</p> <p>Transmit GPI ON (as a Key Press), GPI OFF (as a Key Release), GPO ON, and GPO OFF messages to a GTP-32 /DC20 Remote Device.</p> <p>USP (Only available for Device Type "USP")</p> <p>Transmit a Key Press to a Remote USP panel.</p>
<p>Action Label</p>	<p>GPO Number</p> <p>AHSC Transmit Action</p>

O F F A C T I O N	Local / Remote	Execute Action on Local IP Buddy Execute Action on Remote Device
	Type	<p>Local:</p> <p>GPO Do Nothing Turn GPO ON Turn GPO OFF</p> <p>MEM Do Nothing Turn MEM ON Turn MEM OFF</p> <p>Sequence Start Start identified sequence at its first line in the Event Action Table.</p> <p>Sequence Stop / Reset Immediately stop sequence.</p> <p>Sequence Toggle Toggle current sequence.</p> <p>Sequence Repeat Repeat current sequence</p> <p>Sequence Next Allows Manual Sequence operation.</p> <p>Key Enable Turn ON Key Enable Turn OFF Key Enable Toggle Key Enable</p> <p>Redundant Turn ON Redundant Mode Turn OFF Redundant Mode Toggle Redundant Mode</p> <p>Main/Backup Select MAIN Select BACKUP Toggle between MAIN/BACKUP</p> <p>Restart Timer Restarts the currently selected timer in the Event Action Table.</p>

		<p>Remote:</p> <p>AHSC Transmit Action</p> <p>Transmit the selected AHSC Action command. If command contains WAIT (%WT), then transmit all characters prior to %WT, wait for the time period defined by %WT, and then transmit the remaining characters or until the next %WT. A command may contain more than one %WT.</p> <p>GTP-32/ DC20 (Only available for Device Type "GTP-32/DC20")</p> <p>Transmit GPI ON (as a Key Press), GPI OFF (as a Key Release), GPO ON, and GPO OFF messages to a GTP-32 /DC20 Remote Device.</p> <p>USP (Only available for Device Type "USP")</p> <p>Transmit a Key Press to a Remote USP panel.</p>
	<p>Action Label</p>	<p>GPO Number</p> <p>AHSC Transmit Action</p>

18. TALLY ASSIGNMENT

Use this page to assign the text legend, font size and tally color to each front panel switch.

Key #	Current State	Tally Source	Tally Type	Number	Tally	Tally Color	Text	Font Size	Event Label	Value
1	OFF: 0	Local	Follow Key		OFF: Green ON: Aqua	~L~ARROW~ ~R~ARROW~	Normal			
2	OFF: 0	Local	Follow Key		OFF: Red ON: Purple	~DN~ARROW~ ~UP~ARROW~	Normal			
3	OFF: 0	Local	Follow GPO	GPO_1	OFF: Amber ON: White	GPO1OFF GPO1ON	Normal			
4	OFF: 0	Local	Follow GPO	GPO_2	OFF: Green ON: White	GPO2OFF GPO2ON	Normal			

TALLY OPERATING MODE

The tally is the LCD backlight on the face of the front panel switch. The LCD backlight colors available are:

Dark

Red, Flashing Red, Blinking Red / Red-Dim, Flashing Red-Dim, Blinking Red-Dim
Green, Flashing Green, Blinking Green / Green-Dim, Flashing Green-Dim, Blinking Green-Dim
Aqua, Flashing Aqua, Blinking Aqua / Aqua-Dim, Flashing Aqua-Dim, Blinking Aqua-Dim
Amber, Flashing Amber, Blinking Amber / Amber-Dim, Flashing Amber-Dim, Blinking Amber-Dim
Blue, Flashing Blue, Blinking Blue / Blue-Dim, Flashing Blue-Dim, Blinking Blue-Dim
Purple, Flashing Purple, Blinking Purple / Purple-Dim, Flashing Purple-Dim, Blinking Purple-Dim

There are two tally configurations, one configuration for an ON tally and another configuration for an OFF tally. All tally configurations are done from the IP Controls Buddy's Tally Assignment web page.

FOLLOW OPERATION

The tally follows the state of the GPI, GPO, KEY, MEM, SEQ, or ENABLE KEY.

When a tally is configured as "Follow GPI", the tally will follow the state of an external device, like a downstream keyer, through an external GPI. Only one GPI can be assigned to control a switch's tally. When a new GPI is assigned to control a tally, the previous assignment is deleted. One GPI can be assigned to control more than one tally. The tally will turn ON when the controlling GPI is ON and turn OFF when the GPI is OFF.

When a tally is configured as “Follow GPO”, the tally will follow the state of its local GPO. Only one GPO can be assigned to control a switch’s tally. When a new GPO is assigned to control a tally, the previous assignment is deleted. One GPO can be assigned to control more than one tally. The tally will turn ON when the local GPO is ON and turn OFF when the GPI is OFF. The tally follows the state of the GPO regardless of the operating mode of the GPO.

When a tally is configured as “Follow KEY”, the tally will follow the state of its currently assigned front panel Key. The tally will turn ON when the Key is pressed and turn OFF when the Key is released.

When a tally is configured as “Follow ENABLE”, the tally will follow the state of its local Enable panel switch. The tally will turn ON when the Enable button is ON and turn OFF when the Enable button is OFF.

When a tally is configured as “Follow MEM”, the tally will follow the state of a local MEM. The tally will turn ON when a MEM is ON and turn OFF when a MEM is OFF.

When a tally is configured as “Follow SEQ”, the tally will follow the state of a local sequence. The tally will turn ON when a sequence is ON and turn OFF when the sequence is OFF

REMOTE OPERATION

A tally can be configured to be controlled by a GPI, GPO or MEM on a remote Universal Switch Panel or by a remote event on a GTP-32/DC20. Similar to the Follow Operation, the tally will turn ON when the remote event is ON and turn OFF when the remote event is OFF.

GTP/DC EXTENDED TALLY OPERATION

A tally can be controlled by multiple Combinatorial Logic events on a remote GTP-32/DC20. Each tally can be controlled by up to 5 different events.

Each tally event name starts with ET_, followed by a Name field and a Status field. The Name field identifies the remote event as a member of a group of tallies on the IP Control Buddy. When a remote event is received that begins with ET, it compares the contents of the Status field with the Status field of all configured ET events within the group, as distinguished by the Name field. If a match is found, the Tally shows the configured Text/Font/Color for that event. All other tallies for that group are turned off. If the Status field does not match any configured events, then the Tally reverts to Off Text/Font/Color, as configured within the Tally Assignment Page.

GTP/DC USER REGISTER OPERATION

A tally can be controlled by User register events on a remote GTP-32/DC20. Each tally can be controlled by up to 5 different User register events.

Key Number	The IP Buddy key number.	
Tally Type	Local- Follow Key, Follow GPI, Follow GPO, Follow ENABLE Key, Follow Memory Location (MEM), Follow Sequence (SEQ) Remote- Tally Remote Device: USP, GTP-32/DC20, Other	
Tally Source	Local	<p>Follow Key- Tally is ON when key is pressed Tally is OFF when key is released</p> <p>Follow GPI- Tally is ON when GPI is ON Tally is OFF when GPI is OFF</p> <p>Follow GPO- Tally is ON when GPO is ON Tally is OFF when GPO is OFF</p> <p>Follow ENABLE- Tally is ON when ENABLE is ON Tally is OFF when ENABLE is OFF</p> <p>Follow MEM- Tally is ON when MEM is ON Tally is OFF when MEM is OFF</p> <p>Follow SEQ- Tally is ON when Sequence is in progress Tally is OFF when Sequence is not running</p>
Tally Source	Remote	<p>Follow remote USP GPI or GPO- Tally is ON when remote GPI/GPO is ON Tally is OFF when remote GPI/GPO is OFF</p> <p>Follow GTP-32 or DC-20 Event Label Tally is ON when Event Label state is ON Tally is OFF when Event Label state is OFF</p> <p>Extended Follow GTP/DC- For use with "ET_" Event Labels only Formatted: ET_NameField_StatusField The Extended Tally is off when received ET Event Label matches Name Field but does not match any Status entries assigned to key or matches OFF entry ET1Tally is ON when the received Event Label matches the Name Field and Status Field for ET1 and the Event Label is ON ET2 through ET4 Tally is ON when the received Event Label matches the Name Field and Status Field for ET2 through ET4, respectively, and the Event Label is ON</p> <p>Follow GTP/DC User Register- For use with "UR_" Event Labels only The UR Event Label is OFF when User Register value does not match any UR entries for key or matches OFF entry value UR1Tally is ON when the received User Register value matches the UR1 value entry UR2 through UR4 Tally is ON when the received User Register value matches the UR1 through UR4 value entry, respectively</p>
Tally Number	GPI / GPO Number SNMP Table Entry Number AHSC Table Entry Number	

Tally	OFF / ON OFF / ET1, ET2, ET3, ET4 for Extended Tallies OFF / UR1, UR2, UR3, UR4 for User Register Tallies
Tally Color	Dark, Red, Green, Amber Flashing Red, Flashing Green, Flashing Amber Blinking Red, Blinking Green, Blinking Amber Dim Red, Dim Green, Dim Amber Dim Flashing Red, Dim Flashing Green, Dim Flashing Amber Dim Blinking Red, Dim Blinking Green, Dim Blinking Amber
Text	Text displayed on key face for each tally entry
Font Size	Small: 3 rows x 6 characters per row Normal: 2 rows x 4 characters per row Big: 1 row x 3 characters per row
Event Label	Manually enter, or cut & paste, the Event Label from the GTP-32's or DC20's Event Notification Table. The event label is case sensitive, may not contain spaces, and must exactly match the Event Notification Table entry. (Refer to the GTP-32 or DC20 User Manual.)
Value	Enter User Register value to match

STANDARD TALLY CONFIGURATION

- 1) Click on the Tally Assignment Button. The Tally Assignment Page will be displayed.
- 2) Click in the Tally Source column and select the tally source.
- 3) Click in the Tally Type column and select the source tally type.
- 4) Click in the Number column dropdown and select the event number.
- 5) Click in the Tally Color column OFF dropdown and select the OFF Text backlight color.
- 6) Click in the Tally Color column ON dropdown and select the ON Text backlight color.
- 7) Click in the OFF Text field and enter the text that will appear on the front panel switch face when the tally is off.
- 8) Click in the ON Text field and enter the text that will appear on the switch face during the tally ON state.
- 9) Click in the OFF Font column dropdown and select the font size used by the OFF Text.
- 10) Click in the ON Font column and select the font size used by the ON Text.
- 11) Click in the Event Label column and enter the GTP-32 or DC20 Event Label. Label spelling must match event label on the remote GTP-32/DC20. (Only available if SOURCE= GTP32/DC20.)
- 12) Repeat steps 2 - 13 to configure each switch tally.
- 13) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR,
Click on any other page button to exit without saving changes.

GTP/DC EXTENDED TALLY CONFIGURATION

- 1) Click on the Tally Type dropdown and select "Follow GTP/DC Extended Tally".
- 2) Click in the Event Label field and enter the name of the Combinatorial Logic event being tallied. The event names must follow this naming scheme:

ET_<Name>_<Status>

Each event name must begin with ET, followed by an underscore. The Name field identifies the group of events that it belongs to. The Name field is followed by an underscore, which is then followed by the Status field. The Status field identifies the individual tally being received within the group.

- 3) Click in the OFF Text field and enter the text that will appear on the front panel switch face when the tally is off. Click in the ON Text field and enter the text that will appear on the front panel switch face when the tally is on.
- 4) Click in the Font column and select the font size used by each tally.
- 5) Click in the OFF Color column and select the tally backlight color. Click in the ON Color column and select the tally backlight color.
- 6) Repeat steps 2 – 5 for each event to be configured.
- 7) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR
Click on any other page button to exit without saving changes.

GTP/DC USER REGISTER CONFIGURATION

- 1) Click on the Tally Type dropdown and select "Follow GTP/DC User Register".
- 2) Click in the Event Label field and enter the name of the User register event being tallied.
- 3) Click in the Value field and enter the value of the User register event being tallied. (Normally OFF is zero and ON is one)
- 4) Click in the OFF Text field and enter the text that will appear on the front panel switch face when the tally is off. Click in the ON Text field and enter the text that will appear on the front panel switch face when the tally is on.
- 5) Click in the Font column and select the font size used by each tally.
- 6) Click in the OFF Color column and select the tally backlight color. Click in the ON Color column and select the tally backlight color.
- 7) Repeat steps 2 – 6 for each event to be configured.
- 8) Click on the Save button to save changes. Changes will take effect immediately after saving.
OR
Click on any other page button to exit without saving changes.

19. EXAMPLES: RECEIVE PATTERN MATCHING

NOTE- ASCII and HEX data can be mixed in a user entered pattern. For simplicity only, the examples do not mix ASCII or HEX in a user entered pattern.

ASCII Examples

User Entered Pattern	Received ASCII Data	Notes
ABCD	ABCDEFGF	Successful pattern match of first 4 received characters
ABCD	1234ABCDEFGF	Successful pattern match of 5th, 6 th , 7 th , and 8 th received characters
ABCD	1234A5BCDEFG	No pattern match. User entered pattern must be received as entered.
A %XX C D NOTE- spaces are not included in pattern match	ABCD ACCD AJCD A2CD	The value of the second character in the pattern, %XX, is like a wildcard, so it can be any character. A successful pattern match will result if the first, third and fourth characters are correct. All four received character patterns are a successful pattern match.
A %XX C D	1234ABCDEFGF 1234A5CDEFG 4AKCDE	Successful pattern matches.
A %XX C D	ACD	No pattern match. Four characters must be received.

Hex Examples (Base 16 Numbering)

User Entered Pattern	Received Hex Data (spaces for display only)	Notes
%12 %34	12 34 12 34 56 78 56 78 12 34 9A 56 78 12 34	Successful pattern matches for hexadecimal values 12 and 34.
%X2	12 32 52 A2	The first half of the received Hex value is like a wildcard and can be any value. Only the second half must match the user entered value. Successful pattern matches.
%12 %4X	12 43 12 4A 12 49 56 98 12 49	The second half of the received Hex value is like a wildcard and can be any value. Only the first half must match the user entered value. Successful pattern matches.
%12 %4X	12 34 12 84 12 56	No pattern match.

Binary Examples (Base 2 Numbering)

User Entered Pattern	Received Binary Data (spaces for display only)	Notes
#0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	01011000	Bit 7 is immediately after the '#'. Bit 0 is on the far right. A pattern match occurs only when Bit 7= 0 and Bit3= 1. The received data must exactly match these identified bit values for a match. The values of the other 6 bits are ignored. Successful match.
#0XXX1XXX	01111111 00001000 01101001	Successful pattern matches.
#0XXX1XXX	10001000	No pattern match. Bit 7, on the far left is '1'. It must be '0' to match.
#0XXX1XXX	00000000	No pattern match. Bit 3 is '0'. It must be '1' to match.

User Entered Pattern	Received Binary Data (spaces for display only)	Notes
<0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	01011000	Bit 7 is immediately after the '#'. Bit 0 is on the far right. A pattern match occurs when Bit 7= 0 or Bit3= 1. Only one of the bits in the received data must match. The values of the other 6 bits are ignored Successful match.
<0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	11111111	Received Bit 7 =1. Received Bit 3= 1. At least one identified bit, Bit 3, matches. Successful pattern match.
<0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	10000000	Received Bit 7 =1. Received Bit 3= 0. None of the identified bits match the user entered pattern. No pattern match.
<0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	11111111 00000000 01010101 10101010	Successful pattern matches.
<0XXX1XXX Bit7 = 0, Bit3= 1 All other bits are "Don't care"	11110111 10000000 11010101 10100010	No pattern match.

ASCII Examples

User Entered Pattern	Received ASCII Data	Notes
!A	B	A pattern match is successful when the received character is any character except 'A'.
!A	AAAAAA	All of the received characters are 'A'. No pattern match.
!A	AB	The second character is not an 'A'. The received data is a successful pattern match.
!A	BA	The first character is not an 'A' and is a successful pattern match. The received data is a successful pattern match.
!A	BC	No character is an 'A'. Successful pattern match.
!AB	AB	The first character can be any character except 'A'. The second character must be 'B'. No pattern match
!AB	CB DB ZB	The first character can be any character except 'A'. The second character must be 'B'. Successful pattern match
!AB	CD	The first character can be any character except 'A'. The second character must be 'B'. No pattern match

Hex Examples (Base 16 Numbering)

User Entered Pattern	Received Hex Data	Notes
!%12	12	A pattern match is successful when any value is received except 12. No pattern match.
!%12 34	22 34	A pattern match is successful when any value is received except 12, immediately followed by 34 Successful pattern match.
!%12 34	11 34 21 34 9F 34 87 34	Successful pattern matches.
!%12 34	11 12 34	No pattern match
!%12 34	11 22 34 11 45 34 56	Successful pattern matches

20. EXAMPLES: SEQUENCES

When the Sequence Timer's event time expires, the associated ON Action will execute and then the timer for the sequence's next entry in the Event Action Table will start.

Upon receipt of a Sequence Start action, the timer for the Sequence's first entry in the Event Action Table will start.

Upon receipt of a Sequence Stop action, the sequence will immediately stop. The sequence entry in progress will halt without executing. The next Start action will cause the sequence to start at its first entry in the Event Action Table.

When the last Sequence action executes, the sequence will automatically turn off and stop executing. If the last Sequence action is Sequence Start, the sequence will loop until a Sequence Stop is received.

Example #1 Wait for Sequence Start action and then play sequence until end and stop.

Event Type	Event	Description
Key Press	1	Sequence 1 Start action
Sequence 1 Timer	100ms	Delay 100ms and then execute assigned ON Action
Sequence 1 Timer	1 sec	Delay 1 second and then execute assigned ON Action
Sequence 1 Timer	10 sec	Delay 10 seconds and then execute assigned ON Action
Sequence 1 Timer	100ms	Sequence 1 Start action
Key Press	2	Sequence 1 Stop action

21. EXAMPLES: MEM / FLIP FLOP

To setup a FLIP FLOP action the use of a MEM is required. A source events (GPI or Keypress) ON action will FLIP FLOP the action of two GPO's.

The selected MEM that is being toggled will need to be setup in following manner to trigger the FLIP FLOP action.

ON ACTION: TURN ON GPO_1, TURN OFF GPO_2
OFF ACTION: TURN OFF GPO_1, TURN ON GPO_2

Example #1 MEM FLIP FLOP GPO 1 and 2

Local	Key Press	1	Local	MEM Toggle	MEM_1	Local	Do Nothing	
Local	MEM	MEM_1	Local	GPO ON	GPO_1	Local	GPO OFF	GPO_1
Local	MEM	MEM_1	Local	GPO OFF	GPO_2	Local	GPO ON	GPO_2

22. EXAMPLES: MEM / RADIO GROUP TALLY

To setup a MEM based RADIO GROUP TALLY the use of MEMs is required.

First a MEM/s will need to be assigned to a Radio Group (RG1 – RG6)

MEM CONFIGURATION			
MEM#	MEM Label	Radio Group	Currently
1	RWD	RG1	OFF
2	PLAY	RG1	OFF
3	STOP	RG1	ON

A source events (GPI, Keypress or Serial Event) ON action will turn ON the MEM/s associated with the Radio Group. MEM ON must be selected as the ON action for the Radio Group functionality to work properly.

Line#	EVENT IN			ON ACTION			OFF ACTION		
	Source	Event Type	Event	Local/Remote Device	Type	Action Label	Local/Remote Device	Type	Action Label
1	Local	Key Press	1	Local	MEM ON	RWD	Local	Do Nothing	
2	Local	Key Press	2	Local	MEM ON	PLAY	Local	Do Nothing	
3	Local	Key Press	3	Local	MEM ON	STOP	Local	Do Nothing	

Assign each MEM to a specific IP Buddy Key in the Tally Assignment page.

TALLY ASSIGNMENTS										
Key #	Current State	Tally Source	Tally Type	Number	Tally	Tally Color	Text	Font Size	Event Label	Value
1	OFF: 0	Local	Follow MEM	RWD	OFF:	Red	RWD	Normal		
					ON:	Green	RWD	Normal		
2	OFF: 0	Local	Follow MEM	PLAY	OFF:	Red	PLAY	Normal		
					ON:	Green	PLAY	Normal		
3	ON: 1	Local	Follow MEM	STOP	OFF:	Red	STOP	Normal		
					ON:	Green	STOP	Normal		

When a Source Event triggers on the IP Buddy, the MEM tied to this source event will turn ON. This MEM ON action will cause its Key tally to turn ON all other Key tallies in the same Radio Group will turn OFF.

23. EXAMPLES: GPO MOMENTARY RADIO GROUP

To setup a GPO Momentary Radio Group the use of MEMs is required.

First, in the GPO actions page set the operating mode of each GPO you will be using to “momentary” and set the desired momentary on-time.

GPO CONFIGURATION						
GPO#	GPO Label	User Defined ON State	Operating Mode	Momentary On Time (*10ms)	Group	Currently
1	GPO_1	Relay Closed ▼	Momentary ▼	100 ▼		OFF
2	GPO_2	Relay Closed ▼	Momentary ▼	100 ▼		OFF
3	GPO_3	Relay Closed ▼	Momentary ▼	100 ▼		OFF

Next, in the MEM Configuration page assign a MEM to each GPO that you will be using for your Radio Group. Under the Radio Group Dropdown, assign all MEM’s to the same radio group (RG1 – RG5)

MEM CONFIGURATION			
MEM#	MEM Label	Radio Group	Currently
1	GPO_1	RG1 ▼	OFF
2	GPO_2	RG1 ▼	OFF
3	GPO_3	RG1 ▼	OFF

A source event (GPI, Keypress or Serial Event) ON action will turn ON the MEM/s and GPO’s associated with the Radio Group. MEM ON must be selected as the ON action for the Radio Group functionality to work properly.

EVENT IN -> ACTION OUT TABLE									
Line#	EVENT IN			ON ACTION			OFF ACTION		
	Source	Event Type	Event	Local/Remote Device	Type	Action Label	Local/Remote Device	Type	Action Label
1	Local ▼	Key Press ▼	1 ▼	Local ▼	GPO ON ▼	GPO_1 ▼	Local ▼	Do Nothing ▼	
2	Local ▼	Key Press ▼	2 ▼	Local ▼	GPO ON ▼	GPO_2 ▼	Local ▼	Do Nothing ▼	
3	Local ▼	Key Press ▼	3 ▼	Local ▼	GPO ON ▼	GPO_3 ▼	Local ▼	Do Nothing ▼	
4	Local ▼	Key Press ▼	1 ▼	Local ▼	MEM ON ▼	MEM_1 ▼	Local ▼	Do Nothing ▼	
5	Local ▼	Key Press ▼	2 ▼	Local ▼	MEM ON ▼	MEM_2 ▼	Local ▼	Do Nothing ▼	
6	Local ▼	Key Press ▼	3 ▼	Local ▼	MEM ON ▼	MEM_3 ▼	Local ▼	Do Nothing ▼	

Assign each MEM to a specific IP Buddy Key in the Tally Assignment page.

TALLY ASSIGNMENTS								
Key #	Current State	Tally Source	Tally Type	Number	Tally	Tally Color	Text	Font Size
1	OFF: 0	Local	Follow MEM	MEM_1	OFF:	Green	SW1 OFF	Small
					ON:	Amber	SW1 ON	Small
							WTVJ BRB NBC6.1	
2	OFF: 0	Local	Follow MEM	MEM_2	OFF:	Green	SW2 OFF	Small
					ON:	Amber	SW2 ON	Small
							WTVJ BRKIN NBC6.1	
3	OFF: 0	Local	Follow MEM	MEM_2	OFF:	Green	SW3 OFF	Normal
					ON:	Amber	SW3 ON	Normal

When a Source Event triggers on the IP Buddy, the MEM tied to this source event will turn ON. This MEM ON action will cause its Key tally to turn ON all other Key tallies in the same Radio Group will turn OFF.

24. SPECIFICATIONS

REAR PANEL CONNECTORS	
POWER:	+12V DC, 1.0Amps, Power Over Ethernet (Optional)
ETHERNET:	RJ45 100baseT, Full Duplex If Ethernet LED is Orange: Ethernet device is connected to the cable modem at 100 Mbps speeds. If Ethernet LED is NOT Orange: Ethernet device is connected to the cable modem at 10 Mbps speeds.
S1 Switch:	Press and hold 10 seconds to reset IP address to 192.168.10.217 and configuration to factory default


Rear Panel Terminal Blocks

RS232 Wiring:
Pin 1 Transmit
Pin 2 Receive
Pin 5 Ground



RS422 Wiring:
Pin 1 Transmit B (+)
Pin 2 Receive A (-)
Pin 3 Transmit A (-)
Pin 4 Receive B (+)
Pin 5 Ground

When ON, GPO 1 – 4
is connected to GND

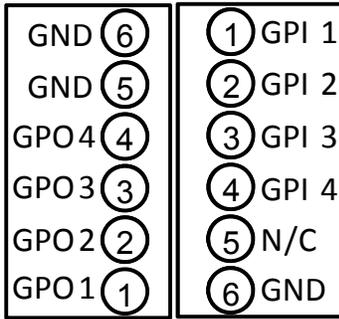

Connect GPI1 – 4 to GND
to turn on GPI

 
GPO

GPI

Set Defaults
Button



J17



External
Power

26. DNF CONTROLS LIMITED WARRANTY

DNF Controls warrants its product to be free from defects in material and workmanship for a period of one (1) year from the date of sale to the original purchaser from DNF Controls.

In order to enforce the rights under this warranty, the customer must first contact DNF's Customer Support Department to afford the opportunity of identifying and fixing the problem without sending the unit in for repair. If DNF's Customer Support Department cannot fix the problem, the customer will be issued a Returned Merchandise Authorization number (RMA). The customer will then ship the defective product prepaid to DNF Controls with the RMA number clearly indicated on the customer's shipping document. The merchandise is to be shipped to:

DNF Controls
19770 Bahama St.
Northridge, CA. 91324
USA

Failure to obtain a proper RMA number prior to returning the product may result in the return not being accepted, or in a charge for the required repair.

DNF Controls, at its option, will repair or replace the defective unit. DNF Controls will return the unit prepaid to the customer. The method of shipment is at the discretion of DNF Controls, principally UPS Ground for shipments within the United States of America. Shipments to international customers will be sent via air. Should a customer require the product to be returned in a more expeditious manner, the return shipment will be billed to their freight account.

This warranty will be considered null and void if accident, misuse, abuse, improper line voltage, fire, water, lightning or other acts of God damaged the product. All repair parts are to be supplied by DNF Controls, either directly or through its authorized dealer network. Similarly, any repair work not performed by either DNF Controls or its authorized dealer may void the warranty.

After the warranty period has expired, DNF Controls offers repair services at prices listed in the DNF Controls Price List. DNF Controls reserves the right to refuse repair of any unit outside the warranty period that is deemed non-repairable.

DNF Controls shall not be liable for direct, indirect, incidental, consequential or other types of damage resulting from the use of the product.

###