



12843 Foothill Blvd. Suite C Sylmar, California 91342 V: 818.898.3380 F: 818.898.3360 sales@dnfcontrols.com

# Rev 102511 Local USP To Remote USP System Configuration

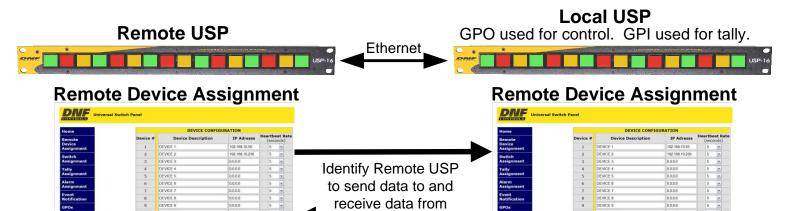

Enter IP Address of Remote Device(s) that the USP will communicate with.

#### **Switch Assignment**

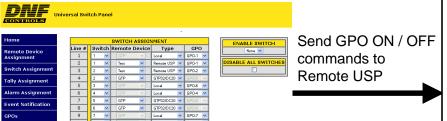

Assign switch to control remote GPO
Set Type= Remote USP
Set GPO# to the remote GPO to be controlled.

## On Local USP's GPO Web Page

GPO's Operating Mode= LATCH:

GPO will toggle state when remote key is pressed. The GPO will ignore remote key release.

Enter IP Address of Remote Device(s) that the USP will communicate with.

GPO's Operating Mode= MOMENTARY:

GPO will turn on when remote key is pressed and then automatically turn off when its ON TIME expires. The GPO will ignore remote key release.

GPO's Operating Mode= FOLLOW:

GPO will turn on when remote key is pressed and turn off when remote key is released.


GPO's Operating Mode= RG (Radio Group)

GPO will turn on when remote key is pressed and ignore remote key release. All other members of radio group will turn off.

GPO's Operating Mode= FF (Flip Flop)

When remote key is pressed, the flip flop's Master and Slave GPO will alternate state. The remote key release is ignored.

### **Tally Assignment**

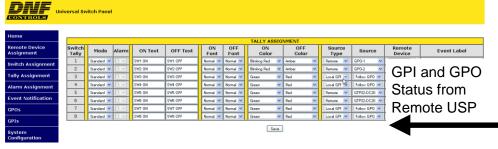

Tally Remote USP's GPO or GPI Set switch's Source Type= Remote Set switch's Source= desired GPI# or GPO# Select Remote USP to tally

#### **Event Notification**

Home				
Remote Device Assignment				
Switch Assignment				
Tally Assignment				
Alarm Assignment				
Event Notification				
GPOs				
GPIs				
System Configuration				

GPIO EVENT NOTIFICATION					
Line #	GPIO		Remote Device		
1	None	~	GTP	٧	
2	None	~	GTP	¥	
3	None	~	GTP	¥	
4	None	~	GTP	Y	
5	None	~	GTP	Y	
6	None	~	GTP	¥	
7	None	~	GTP	٧	
8	None	*	GTP	٧	
9	None	*	GTP	¥	
10	None	~	GTP	¥	
11	None	~	GTP	V	
12	None	~	GTP	V	
13	None	~	GTP	V	
14	None	~	GTP	¥	
15	None	~	GTP	¥	
16	None	~	GTP	Y	
17	None	*	GTP	¥	
18	None	~	GTP	¥	
19	None	¥	GTP	¥	